

---

Subject: Master/slave setting question

Posted by [Lincon](#) on Fri, 30 Aug 2019 05:56:49 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hello everyone,,

I was wondering this thing; with two ULN 8's connected, one as master and one as slave, things seem to work fine with Logic so far.

But now I'm diving deeper into some Logic advanced stuff, I'm would like to know what should be the setting in Logic ?

So far I discovered that Logic is still on internal syncing, so it is a master too, isn't it ?

Should I set logic to internal, manual or auto enable external sync ?

Not working with aggregate devices, but connected via firewire and a digital aes cable only.

---

---

Subject: Re: Master/slave setting question

Posted by [bj](#) on Tue, 10 Sep 2019 17:39:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Logic reflects the clock setting of the audio device it is using; Internal means "Internal clock of the ULN-8"

---