
Subject: Sending stereo output to single monitor
Posted by [jaaneman](#) on Thu, 07 Feb 2019 19:27:40 GMT
[View Forum Message](#) <> [Reply to Message](#)

First post Razz

I started mixing in mono with a single monitor and I get good results, but I can't seem to figure out how to get a stereo signal to the monitor. I only get mid and left signal.

In monitor control I set source to Daw 1 and Daw 2 and the path to a mono bus which defaults to Left, then I send that to output Monitor L.

This receives the middle and left side of the mix but nothing from the right.

Is there a way to send the stereo signal to a mono output via Monitor L so that I can also hear what is panned hard right?

I'm sure there is, but I can't get my head around it Confused

Thanks for your help

Subject: Re: Sending stereo output to single monitor
Posted by [bj](#) on Thu, 07 Feb 2019 20:05:15 GMT
[View Forum Message](#) <> [Reply to Message](#)

Have you tried hitting the "Mono" button in the MC?
